
SELF-SET® KNIFE PLANER & JOINTER INSTALLATION INSTRUCTIONS

SELF-SET is a simple 2-part system consisting of a disposable double edge knife precisely matched to a reusable holder. Each holder has locking pins & magnets that securely and accurately match the holes in the **DISPOZ-A-BLADE** knife. The assembled holder & knife equals the dimensions of your current knives

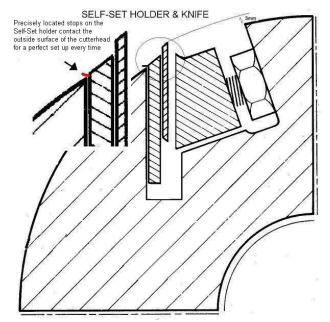

SAFETY FIRST!

- Disconnect all power to the machine.
- Exercise caution and use common sense when handling SELF-SET. **Wear Gloves**.
- Adhere to all safety guidelines & procedures outlined in your machine manual.

SELF-SET® INSTALLATION

- 1. Loosen the Bolts of the gib bar in the knife pocket of the cutter head.
- 2. Remove the gib, old knife, and any springs or Jack Screws on the bottom of the knife pocket.
- 3. Thoroughly clean each knife pocket and gib of all dust, debris and pitch.
- 4. Place gib bar loosely in the center of the knife pocket.
- 5. Snap the Dispoz-a-Blade HSS or Kobalt knife onto the pins of the SELF-SET holder so that both bevels are oriented in the same direction.
- 6. Slide the assembled SELF-SET holder and knife into the knife pocket until the stops on the holder contact the outside surface of cutter head on the back side of the knife pocket.
- 7. While lightly holding SELF-SET in place, tighten the gib screws beginning with the center bolt then alternately tightening left and right screws outward. DO NOT OVER TIGHTEN!
- 8. Repeat for each knife pocket.
- 9. **FOR JOINTERS ONLY:** Adjust the height of the jointer's out feed table to the top edge of the installed knife when it is at its highest point when rotated by hand in the cutter head (known as top dead center). Refer to your machine's instruction manual.
- 10. Check for adequate clearance between the knives and the machine's surrounding parts before starting.
- 11. SELF-SET knife changes are now quick and accurate! Remember frequent changes mean quality finishes and prolonged machine life.

RETURN / EXCHANGE POLICY: SELF-SET holders and replacement knives may be returned for credit, refund or exchange within 30 days from the date of purchase only if they are received undamaged and in re-saleable condition. Products that are returned damaged as a result of improper installation or misuse are not eligible. Dispoz-A-Blade knife inserts that have been used cannot be accepted for credit, refund or exchange.

Toll Free: 800-557-8092 * Fax 877-557-6901

Only for use with genuine DISPOZ-A-BLADE replacement knives.